

HiLobe 2704-6204

Vacuum boosters

PFEIFFER 
VACUUM+FAB SOLUTIONS

Part of the **BUSCH** GROUP



Reliable

High up-time due to intelligent condition monitoring via integrated sensors

High performance

High pumping speed, best performance-to-size ratio

Efficient

Hermetically sealed synchronous motor (IE5), variable speed drive, optimized rotor geometries, extended maintenance intervals, canned motor design, no shaft seals

Accessories, spare parts and options

- Profinet Converter
- Barrier gas kit (plastic or stainless steel)
- Gear chamber evacuation
- Flushing device (spray lance)
- Temperature and pressure monitoring (inlet and exhaust side)
- Extension cable package
- OmniControl
- Horizontal version
- Operating fluids
- Electronic drive options: box version, mounting plate for switch cabinet integration, without drive electronics
- Cooling options: convection cooling, active-air cooling, water cooling


HiLobe 2704-6204

Vacuum boosters


PFEIFFER
VACUUM+FAB SOLUTIONS

Part of the **BUSCH** GROUP

Dimensional drawing

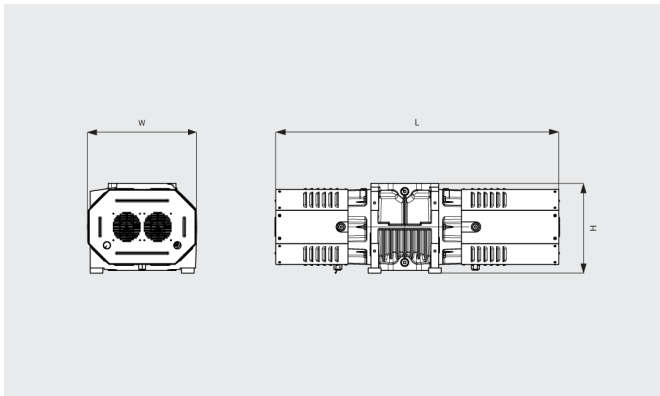

Pumping speed

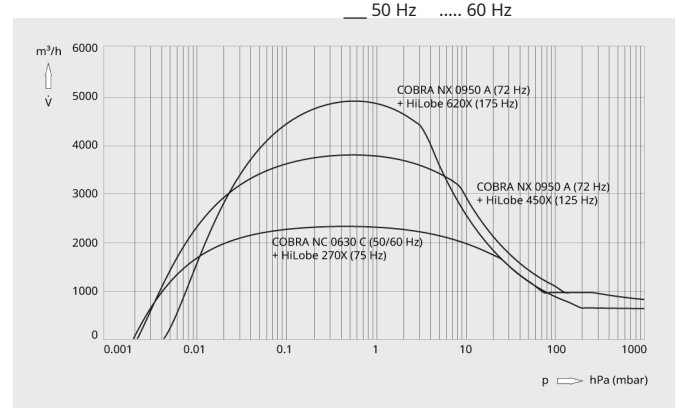

	HiLobe 2704	HiLobe 4504	HiLobe 6204
Nominal pumping speed	890-2700 m³/h	890-4440 m³/h	890-6220 m³/h
Rotational speed	1500-4500 rpm	1500-7500 rpm	1500-10500 rpm
Max. differential pressure at max. rotational speed	35 hPa	17 hPa	10 hPa
Max. differential pressure max. at min. rotational speed	50 hPa	50 hPa	50 hPa
Main Flange Size/Type	DN 160 ISO-F DN 150 PN 16	DN 160 ISO-F DN 150 PN 16	DN 160 ISO-F DN 150 PN 16
Secondary Flange Size/Type	DN 160 ISO-F DN 150 PN 16	DN 160 ISO-F DN 150 PN 16	DN 160 ISO-F DN 150 PN 16
Input Voltages	380-480 AC (±10), 50/60 Hz	380-480 AC (±10), 50/60 Hz	380-480 AC (±10), 50/60 Hz
Motor version	three-phase	three-phase	three-phase
Motor protection	PTC	PTC	PTC
Rated power at full rotational speed	3,5 kW	5,5 kW	7,5 kW
Electronic drive unit	RC 7500	RC 7500	RC 7500
Recommended mains fuse capacity	25 A	25 A	25 A
I/O Interfaces	PV.can; RS485	PV.can; RS485	PV.can; RS485
Cooling method	Active air cooling	Active air cooling	Active air cooling
Ambient temperature	5-40 °C	5-40 °C	5-40 °C

HiLobe 2704-6204

Vacuum boosters

PFEIFFER 
VACUUM+FAB SOLUTIONS

Part of the **BUSCH** GROUP

	HiLobe 2704	HiLobe 4504	HiLobe 6204
Shipping temperature	-10-40 °C	-10-40 °C	-10-40 °C
Sound pressure level (EN ISO 2151) at inlet pressure 1 hPa	62 dB(A)	65 dB(A)	65 dB(A)
Operating fluid	D2	D2	D2
Operating fluid filling	3.2 l	3.2 l	3.2 l
Protection degree	IP54; type 12	IP54; type 12	IP54; type 12
Integral leak rate	1E-06 Pa m ³ /s	1E-06 Pa m ³ /s	1E-06 Pa m ³ /s
Dimensions (L x W x H)	1122 x 430 x 354 mm	1122 x 430 x 354 mm	1122 x 430 x 354 mm
Weight approx.	280 kg	280 kg	280 kg

DO YOU WANT TO KNOW MORE?

Get in touch with us directly!



CONTACT FORM